

CMW-FCC-CO1C

Disinfection Module Solution

**Specification** 

CMW-FCC-CO1C





### **Product Brief**

### **Description**

This module is designed for disinfection.

#### **Features and Benefits**

- UVC LED
- Low thermal resistance
- Simple BOM
- Miniaturization
- Lead Free Product
- Waterproof module (front only)

### **Key Applications**

Disinfection

Table 1. Product

		ф. Г <b>У</b> АЛ		Wp [nm]		
Model	Input Voltage [V]	Фе [mW]	MIN	ТҮР	MAX	Remark
CMW-FCC-CO1C	12V	3.5	270	275	280	Constant Voltage Drive



CMW-FCC-CO1C

# **Table of Contents**

Index	к	
•	Product Brief	
•	Table of Contents	
•	Performance Characteristics	
•	Mechanical Dimensions	
•	Packing	
•	Label Information	
•	Precaution for Use	



CMW-FCC-CO1C

### **Performance Characteristics**

Table 2. Electro Optical Characteristics at 12V (Constant Voltage)

 $(T_a = 25^{\circ}C RH = 30\%)$ 

Parameter`	Cymahal		Value		Unit
Parameter	Symbol	Min.	Тур.	Max.	
Peak wavelength <sup>[1]</sup>	λр	270	275	280	nm
Forward Current	I <sub>F</sub>	48	60	72	mA
Power Consumption	Р	0.58	0.72	0.87	W
Radiant Flux <sup>[2]</sup>	Фе <sup>[3]</sup>	2.5	3.5		mW

#### Notes:


- (1) Peak Wavelength Measurement tolerance :  $\pm 3$ nm
- (2) Radiant Flux Measurement tolerance : ±10%
- (3)  $\Phi$ e is the Total Radiant Flux as measured with an integrated sphere.
- (4) All measurements were made under the standardized environment of Seoul viosys

**Table 3. Absolute Maximum Ratings** 

Parameter	Symbol	Unit	Value
Operating Temperature	Topr	°C	-20 ~ +40
Storage Temperature	Tstg	°C	-20 ~ +60

CMW-FCC-CO1C

### **Drawing**

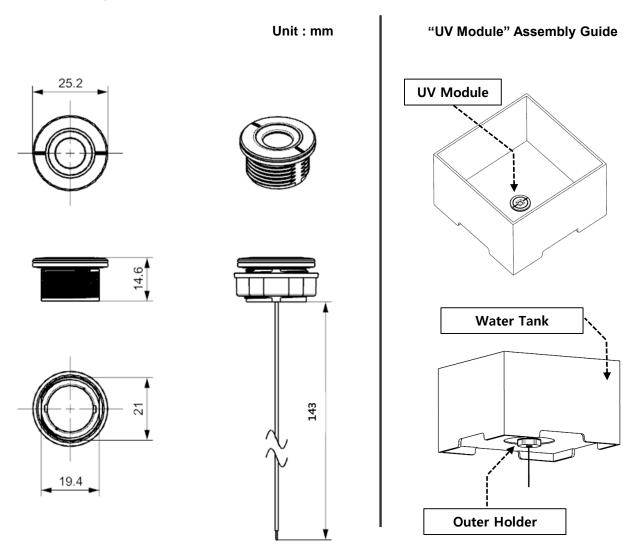

#### Notes:

- "Outer Holder" When assembly, the torque varies depending on the material and thickness of the product. Test and use it to suit your environment.


[SVC does not guarantee about assembly failure for Outer Holder.]

- Module Dimensions of the indicated maximum value, and to allow a tolerance : ±0.5 [mm]
- Wire Dimensions of the indicated maximum value, and to allow a tolerance : ±5 [mm]

CMW-FCC-CO1C

### **Packing**


#### 1) 1 Tray = 90 pcs of products

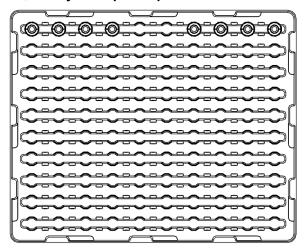


#### 2) Stacking 10 Trays

#### (The top tray is an empty Tray)

- $\rightarrow$  9 tray X 80 pcs = 720 pcs (1Tray=dummy)
- → 1 tray pack 80 pcs
- → Total Quantity : 720 pcs

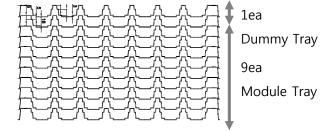

#### 3) Tapping 10 Tray to fix.

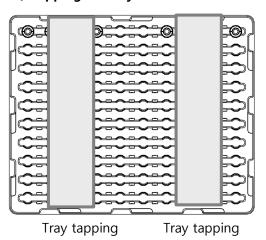

Rev00, February 28, 2022

### ₹

Pack the tray in a box



• 1BOX: 80ea per tray x 9 Trays +1dummy Tray

= UV Module 720ea

555mm

TOTAL: 720ea per 1BOX

\* If it is not a full box, apply the buffer material to fix the product

CMW-FCC-CO1C

### **Label Information**

Model No.	CMW-FCC-CO1C (1)
Туре	-
Quantity	XXX
Lot No.	YYMMDD-SVC-XXXX <sup>(2)</sup>
SEOUL	SEOUL VIOSYS CO.,LTD.

#### Reference

(1) It represent module part number.

(2) YYMDD : Packing Date

YY : last 2digits of year(ex – 2018  $\rightarrow$  18)

MM : Month(2digits)
DD : Date(2digits)

-

SVC : Supplier

-


XXXX: Packing box number

#### Note

\* Affixed to the label space of the box

### \* Labeling



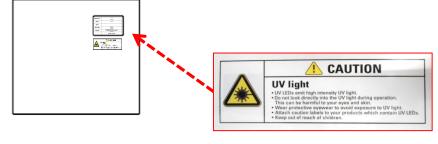



CMW-FCC-CO1C

### **Precaution for Use**

### 1) Storage

- To avoid moisture penetration, we recommend storing UV-Module in a dry box with a desiccant. The recommended temperature and Relative humidity are between 5℃ and 30℃ and below 50% respectively.
- UV-Module must be stored properly to maintain the device. If the UV-Module is stored for 3 months or more after being shipped from SVC, a sealed container with a nitrogen atmosphere should be used for storage.
- Replace the remained UV-Module into the moisture-proof bag and reseal the bag after work to avoid those UV-Module being exposed to moisture. Prolonged exposure to moisture can adversely affect the proper functioning of the UV-Module.

### 2) Handling Precautions

- VOCs (Volatile organic compounds) emitted from materials used in the construction of fixtures can
  penetrate products and discolor them when exposed to heat and photonic energy. The result can be a
  significant loss of light output from the fixture. Knowledge of the properties of the materials selected
  to be used in the construction of fixtures can help prevent these issues.
- In case of attaching UV-Module, do not use adhesives that outgas organic vapor.
- Please do not use(or storage) together with the materials containing Sulfur.
- Do not use inflammable material nearby the products.
- · Do not touch the products with wet hand
- Do not fix or remodel the products.
- Do not drop the machine, or give strong impact on the products.
- The UV-Module is encapsulated with special material for the highest flux efficiency. So it needs to be handled carefully as below
  - Avoid touching quartz glass parts especially with sharp tools such as Tweezers
  - Avoid leaving fingerprints cover parts.
  - UV-Module will attract dust so use covered containers for storage.
  - It is not recommend to cover the UV-Module with other materials (epoxy, urethane, etc)

### 3) Safety for eyes and skin

• The Products emit high intensity ultraviolet light which can make your eyes and skin harmful, So do not look directly into the UV light and wear protective equipment during operation.

### 4) Cleaning

· After assembly the product, empty the water and then wipe the UV-Module with a dry towel.



CMW-FCC-CO1C

### **Precaution for Use**

### 5) Others

- Be sure to turn On / Off after module is connected.
  - When connecting the module in the power on state, LED can be damaged by the influence of the inrush voltage / current.
- The driving circuit must be designed to allow forward voltage or current only when it is ON or OFF. If the reverse voltage is applied to UV-Module, migration can be generated resulting in LED damage.
- Do not handle this product with acid or sulfur material in sealed space
- Please handle using equipment that prevents static electricity.
- Do not touch unless ESD protection is used.
- · Ionizer, grounding and keeping appropriate humidity are necessary for work environment.
- · The appearance and specifications of the product may be modified for improvement without notice





### **CAUTION**

- •UV LEDs emit high intensity UV light.
- •Do not look directly into the UV light during operation. This can be harmful to your eyes and skin.
- •Wear protective eyewear to avoid exposure to UV light.
  •Attach caution labels to your products which contain UV LEDs.

Avoid direct eye and skin exposure to UV light. Keep out of reach of children.